

INSTALLATION & ADJUSTMENT  
of  
**Otico FarmFlex Gauge Wheels**

- 1) Insert 5/8" bolt (not provided) through center of gauge wheel.
- 2) Next place shroud on to bolt. Shroud acts as an inside dust cap.
- 3) Place shim washers (not provided) on bolt next to shroud.
- 4) Install bolt with assembly onto gauge wheel arm and tighten.
- 5) Check rotation. Add or subtract shim washers as needed. We recommend slight contact of gauge wheel tire against the blade to cause drag. If Gauge wheel free wheels after tightening, it is too loose.
- 6) Install outside dust cap which is held in place with snap ring (provided).

See our YouTube video:

<https://youtu.be/SYv39kLTrBg>

-Go to Exapta Solutions' YouTube Channel

-Or, search "OTICO FarmFlex Install"

