

# Installation of Exapta's

## Motorized Hydr Valve for JD & UniForce

1a) For OEM downforce: Remove the pressure-reducing-valve cartridge in the JD valve block by unscrewing it -- the cartridge is the internal piece that has the adjustment knob protruding from it.

1b) For UniForce: Remove the insert from the UniForce valve block by unscrewing it -- the insert is the internal piece that has the adjustment knob protruding from it.

2) Screw the motorized valve into position. **Do not exceed 25 ft-lbs of torque!**

3) Install wiring per schematic. The quick-disconnect splice is to be located near the tractor remotes.

### Maintenance:

If the valve gets stuck, unscrew it and shoot some brake cleaner into the end. Sometimes debris gets caught there.

