


INSTALLATION & ADJUSTMENT  
to mount Drill Keeton on CNH Precision Disk Air Seeders

## 06-10782LH & 83RH Steel brackets

1. Keeton receiver needs trimmed in order to fit on the row unit.

See image of where to cut top of bracket off, just above the 3<sup>rd</sup> bolt hole.

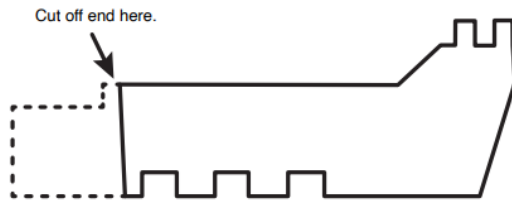

2. Loosen the two bolts attaching scraper to opener but do not remove them.
3. Install Exapta bracket by carefully removing the rear bolt with one hand while holding spacer washers in place with the other hand. Once bolt is removed insert the bolt into the rear hole of Exapta bracket and reattach bolt with bracket. Tighten finger tight while keeping spacer washers in place.
4. Remove front bolt. Align front hole of Exapta bracket with front hole of scraper, reinsert bolt and tighten.
5. Attach plastic Keeton receiver to Exapta steel bracket with bolts provided and tighten. (photo) Keeton tail can be attached to the plastic receiver during this assembly.



6. If installing Keetons and continue using OEM closing arm you have to cut 1 3/8" off the back of the tail to avoid hitting closing wheel.

